

Drive Away Lock Instructions

Remove cable if applicable. Place supplied spring in cover hole, then adjust set screw to make surface 1, meet edge 2, with set screw just touching spring, then tighten jam nut.

The lock is now set and does not need adjusted again, unless used on a different axle.

Thread body into cover compressing spring. Tighten just a little more than snug.

DO NOT OVER TIGHTEN

Simply remove spring for unlock and reinstall for lock.

